


2D
handheld barcode scanner
User Manual

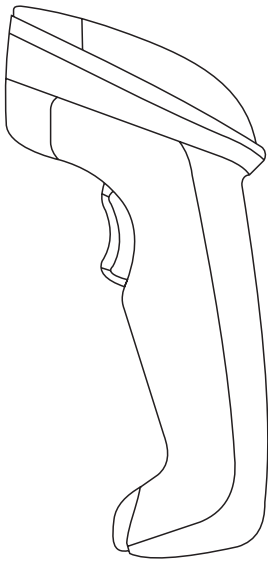

Version:V1.0

This User manual is quick start manual.For detailed manual information,please download the completed user manual from our website or obtain it from our distributor

Factory Default



Note: Default interface:USB-KBW

Setting Procedure:

Scan required bar codes

Eg: Factory default,USB-KBW, add suffix “Enter” etc bar codes as below.

1. Factory Default



2. Enter



Interfaces:



USB-KBW



USB-COM



USB-POS

Scan Mode:



Manual



Continuous



Auto-induction

Inverted Image Reading



Enable Inverted image



Disable Inverted image

Illumination



General
(light on when reading)



Continuous



None

Sound Setting



OFF



ON



Low



High

Keyboard Language



USA



UK



French



Russia

Character Conversion



None



All Capital



All lowercase

Suffix Setting



Enter



Enter & Line feed



TAB



Cancel

Baud Rate Setting (RS232 interfaces)



4800



9600



19200



38400



57600



115200

Barcodes Setting



Disable all Barcodes



Enable all Barcodes



Enable Code 128



Disable Code 128



Enable UCC/EAN-128



Disable UCC/EAN-128



Enable AIM 128



Disable AIM 128



Enable EAN-8



Disable EAN-8



Enable EAN-13



Disable EAN-13



Enable ISSN



Disable ISSN



Enable ISBN



Disable ISBN



Enable UPC-E



Disable UPC-E



Enable UPC-A



Disable UPC-A



Enable Interleaved 2 of 5



Disable Interleaved 2 of 5



Enable ITF-6 no output check digit



Enable ITF-6 output check digit



Disable ITF-6



Enable ITF-14 no output check digit



Enable ITF-14 output check digit



Disable ITF-14



Enable Matrix 2 of 5



Disable Matrix 2 of 5



Enable Industrial 25



Disable industrial 25



Enable Standard 25



Disable Standard 25



Enable Code 39



Disable Code 39



Enable Code 93



Disable Code 93



Enable Code 11



Disable Code 11



Enable Plessey



Disable Plessey



Enable MSI-Plessey



Disable MSI-Plessey



Enable RSS-14



Disable RSS-14



Enable RSS-Expand



Disable RSS-Expand



Enable PDF-417



Disable PDF-417



Enable Data Matrix



Disable Data Matrix



Enable QR



Disable QR