

Laser Barcode Scanner User Manual



Factory Default



Version V6.0

Introduction

This is a easily use manual for laser barcode scanner , if you need the more details about how to use ,please download from our official website or get the manual from distributor

Wireless Setting

★ Scanner pair with receiver

1, Scan “Factory Default”



2, Scan “RF Model”



3, Pull and plug receiver to PC
(The Dual Color LED on receiver will flashing)

4, Scan “Paired ADD”



Note: When the dual color LED flashing in 3 step , to Scan “Paired ADD”

(If multi-scanner paired with one receiver, re-do steps above)

Data Saving Setting



Inventory Mode



Uploading New Data



Uploading All Data



Uploading Statistic



Clear

Note: If you want quit the inventory mode, please scan the bar code “Inventory Mode” again

Scanning Type



Automatic successive scanning



Automatic flashing

Buzzer



Sound OFF



Sound ON

Barcode Display



Display barcode type after barcode



UN-Display type after barcode

Keyboard Model

Selection



USA



German



France

☒ Keyboard Caps Lock Control



None



Capitalize



Lower case

Baud



4800



9600



19200



38400



57600



115200

Prefix&Suffix Setting



AddPre



AddSuff



Hide Before
Character



Hide After
Character

Suffix&Skip Setting



CR



LF



CR&LF



Tab



Space



None

Special Code ON



Code 11ON



MSI CODE



UPC-A



UPC-E



EAN-13



EAN-8



CODE 39



FULL ASCII



CODE 93



CODE 128



CODE 128ISBT



CODEBAR



Enable Interleaved
2 of 5



Industrial 2 of 5



Matrix 2 of 5



CHINA POST CODE