1D Wireless Barcode Scanner User Manual

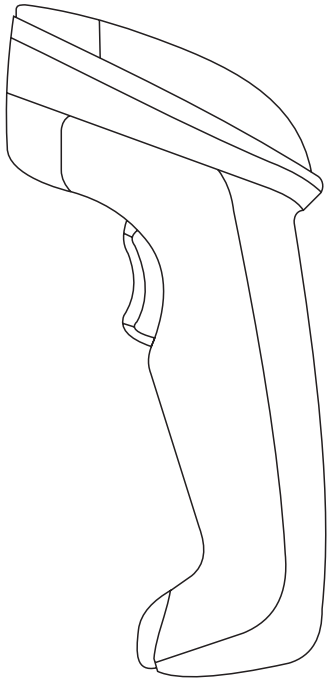

Version (Customized)

Power Off
(Note: Scan this barcode, scanner will make a long beep, then power off)

V1.1

Introduction

This barcode scanner provides a precise and complete solution with easy-using、fast data-recording and saving for computer information system. The scanner supplies three scanning mode: Button-trigger mode、Auto-continuous mode and Auto-flash mode ,and the default one is Button-trigger mode.

This is a easily user manual for this scanner, if you need more details about how to use ,please get the manual from distributors, or download from our official website

Factory Default

Forced Pairing

One scanner pair with one receiver

1、Scan“Factory Default”

2、 Pull and plug receiver to PC

3、 When red indicator light of DATA in receiver flashing continuously, to scan “Forced Pairing”, this step will clear away the previous pairing, and finish the present pairing, after pairing succeed, the scanner will make two sounds of “Beep”

Note: After pairing succeed, the red indicator light of DATA in receiver will flash (about 1time/sec), then open a text to scan needed barcode, in this case red light flash too, and the data can be seen in the text.

Data Saving Setting

Inventory Mode

Upload all data and cleared
(Note: Upload all data stored and clear them)

Upload all data and no cleared
(Note：Upload all data stored but do not clear them)

Upload one data and cleared
(Note: Upload one data stored and clear it)

Upload one data and no cleared
(Note: Upload one data stored but do not clear it)

Display the number of barcode to be uploaded

Clear

Quit Inventory Mode

Scanning Mode

Button Trigger Mode (Default)

Auto-Continuous Scanning Mode

Auto-Flashing Mode

Auto-Induction

ON

OFF

Buzzer

Sound On (Default)

Sound Off

Sound Louder

Sound Lower

Successful data upload indicate (one beep)
(Note:There is one beep after data uploaded succeed)

Successful data upload indicate (two beeps)
(Note：There is two beeps after data uploaded succeed)

Keyboard Mode

Language Choice

USA (Default)

Germany

France

Keyboard Caps Lock Control

Capitalize

Lower Case

Case Swap

None

Suffix Setting

CR

CR & LF

None

Shock Setting

Enable

Disable

Symbologies Selection

Enable CODE-39

Disable CODE-39

Enable FULL ASCII

Disable FULL ASCII

Enable UPC-A

Disable UPC-A

Enable UPC-E

Disable UPC-E

Enable EAN-13

Disable EAN-13

Enable EAN-8

Disable EAN-8

Enable CODE-93

Disable CODE-93

Enable CODE-128

Disable CODE-128

Enable CODEBAR

Disable CODEBAR

Enable Interleaved 2 of 5

Disable Interleaved 2 of 5

Enable Industrial 2 of 5

Disable Industrial 2 of 5

Enable MSI

Disable MSI

Enable CODE-11

Disable CODE-11

Enable Matrix 2 of 5

Disable Matrix 2 of 5

Enable Postal 2 of 5

Disable Postal 2 of 5

Enable Aviation 2 of 5

Disable Aviation 2 of 5

Enable GS1 Omnidirectional

Disable GS1 Omnidirectional

Enable GS1 Limited

Disable GS1 Limited